


Quick Guide for Setting Sensitivity

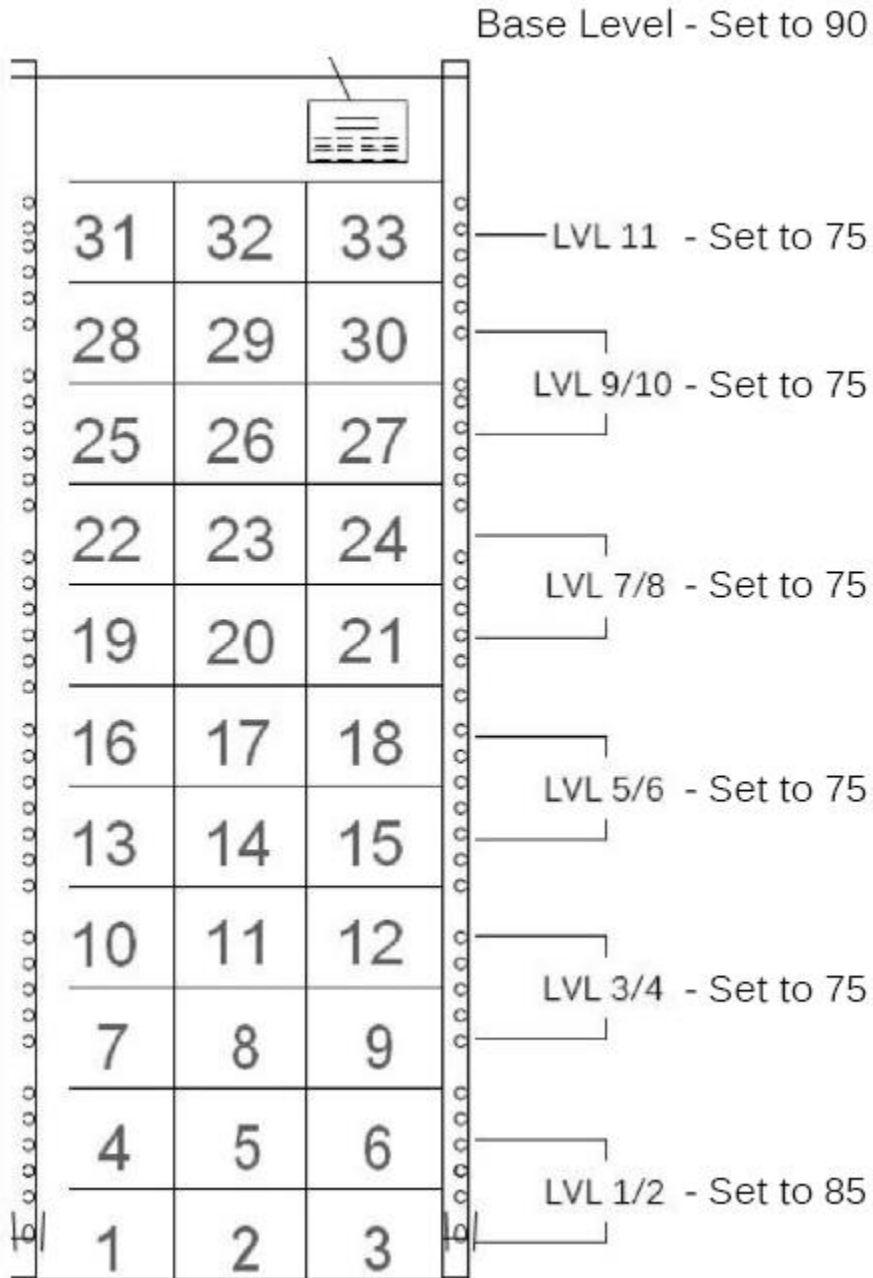

There are 7 Zones total to program.

Starts at LVL1/2 and works its way up to the base. See the Diagram above.

Quick Instructions for Programming.

1. Press Program
2. When "INPUT PASSWORD" shows hit ENTER
3. If correct screen will read "PASSWORD OK"
4. Hit Enter Again
5. Hit sensitivity button.

Should have the first set of the 7 levels to program. LVL 1,2

– See diagram working from the bottom up.

6. Hit the up arrow to change the sensitivity for that zone and down to change Zone. Goes from 0-99

NOTE You can only go up in the zone sensitives cannot go backwards.

Once done changing sensitivity for the first zone press the down arrow should read LVL3,4. Again change the sensitivity level by using the up arrow. Continue these steps until you are at the BASE. (The base is an overall sensitivity zone for all of them.

Once complete press enter.