

MD-6

1. **Access Settings:** Press **Select**. The screen will display **1234** with the "1" flashing. Press **Enter**, and the screen will show **C000** (indicating the password is correct). Press **Enter** again to access the main settings.
2. **Adjust Beep Duration:** The first setting will display **D-01**. This controls the beep duration (1 = 1 second, 2 = 2 seconds, 3 = 3 seconds). To change the duration, press **Select**, then press **Enter** to save.
3. **Set Sound Type:** The second setting will show **Y-01**. This adjusts the sound type (00 = no sound, 01 = bass, 03 = treble). Adjust the setting as needed, then press **Enter** to return to the main screen.
4. **Adjust Zones:** The third setting will display **1-90**, indicating the first zone. To adjust zones 2-6, press **Select** to cycle through each zone. Once all adjustments are made, press **Enter** to return to the main screen.
5. **Change Overall Sensitivity:** To adjust the overall sensitivity, hold **Setup** for 5 seconds until **A-20** (default) appears. Increasing the number makes all zones more sensitive; decreasing it lowers sensitivity.
6. **Change Frequency:** To adjust the machine's frequency, hold **Enter** for 5 seconds until **F-15** (default) appears. This setting is only necessary when using two or more units nearby.

Follow these steps to configure your device's settings efficiently.